

TANNING
essentials® SIMPLE TANNING SYSTEMS *built purposely for a perfect spray tan.*

CORDLESS - TRAINING MANUAL

Cordless



WELCOME

Thank you for choosing the Tanning Essentials Cordless Spray Tan System. Please read the following to help assist you with the set up and maintenance of your spray tan unit.

QUICK SET UP GUIDE

The Tanning Essentials Cordless Spray Tan System contains:

- | | | | |
|---|-----------------------------------|---|--------------------------------|
| 1 | 1 x TE Cordless Applicator System | 4 | 2 x 90ml Solution Cup with Lid |
| 2 | 1 x Adjustable Drying Nozzle | 5 | 1 x Adjustable Spray Nozzle |
| 3 | 1 x Charger | 6 | 1 x Vegan Leather Carry Case |



CORDLESS APPLICATOR



STEP 1

Unscrew the solution cup and fill it with your chosen professional spray tan solution. 50-90ml max.



STEP 2

Connect the solution cup to the Cordless system.

To securely tighten, align the **unlocked symbol** on the solution cup with the dot on the applicator, and twist the cup clockwise until the **locked symbol** on the cup aligns with the dot on the applicator.



STEP 3

Set the nozzle by turning it to your desired setting.

The vertical setting is used when spraying up and down, and the horizontal setting is used when spraying left to right/right to left.



STEP 4

To control the amount of solution released from the fluid nozzle, adjust the dial to select your spray level. Number 1 is the lowest, and number 5 is the highest. A higher setting will result in more of the tanning solution being dispensed. Recommended setting (3) for the body and 1-2 for the face.

Note: How fast you move will affect the application. If the solution looks like it is going to drip on the skin you are moving too slowly, reduce the dial setting or increase the speed.


CORDLESS UNIT



STEP 5

To begin your application, power on the system by holding down the power button for 1-2 seconds. Once powered, click the power button again to increase airflow from min to max. Recommended setting MIN for drying and MAX for application.

Note: Pull the trigger to start the stroke and release the trigger to finish the stroke. The system must be moving when the trigger is pulled.

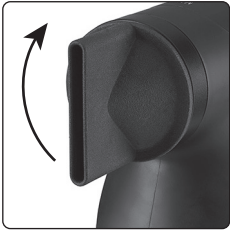

STEP 6

Once the treatment application is complete, hold the power button down to turn the system off. Unscrew the retaining nozzle by twisting it anti-clockwise, remove the adjustable spray nozzle and replace it with the drying nozzle attachment. To secure the fitment of the dry nozzle, re-attach the retaining nozzle by twisting clockwise.



STEP 7

Re-power system with airflow set to MIN, be sure not to pull the trigger as this will release residual solution that may be present in the system.



STEP 8

Once treatment is complete, and the system is turned off, place it back on charge.

CORDLESS APPLICATOR MAINTENANCE GUIDE

Maintenance on the Applicator must be run at the end of each day the applicator is used. Store your Cordless system in the carry case indoors in a cool, dry place below 50°C. Do not leave excess solution in the cup.

STEP 1 Unscrew the solution cup and empty any excess solution. It is recommended this is done over a sink.

STEP 2 Rinse the empty solution cup with warm water.

STEP 3 Refill the solution cup with warm water and screw it back into the applicator, turn the solution dial to “C”, and spray until the water runs clear.

Note: Ensure the adjustable spray nozzle is attached.

STEP 4 Once a cup of water has run through, re-rinse the cup and empty. Re-set solution dial to the regular spray setting of your choice.

STEP 5 Wipe any excess water from the applicator with a cloth and leave it out to dry

Note: Your Cordless system is NOT compatible with harsh cleaners such as gun cleaners, chlorine bleach, or 100% ethanol. Using these cleaners will cause damage to the system.

TROUBLESHOOTING

If you are experiencing problems with this unit, in the first instance please carefully read the relevant sections of the User Manual and the Troubleshooting section below. If you cannot solve your problem please contact your supplier for further assistance.

PROBLEM	CAUSE	WHAT TO DO
My solution is bubbling from the cup	Seal is not fitted correctly.	Fit seal correctly.
	The solution cup is not screwed in correctly.	Unscrew and re-attach the solution cup. To securely tighten, align the unlocked symbol on the solution cup with the dot on the applicator, and twist the cup clockwise until the locked symbol on the cup aligns with the dot on the applicator.
	The solution cup is cross threaded.	Unscrew and re-attach the solution cup. To securely tighten, align the unlocked symbol on the solution cup with the dot on the applicator, and twist the cup clockwise until the locked symbol on the cup aligns with the dot on the applicator.
	Solution cup is overfilled.	Empty some solution from the cup and re-attach.
The air flow is cutting in and out	Battery might be low.	Place on charge.
	Airflow setting is set to MIN.	Increase airflow to MAX by pushing the power button a second time.

TROUBLESHOOTING

PROBLEM	CAUSE	WHAT TO DO
The solution is splattering	The airflow setting is set to MIN.	Increase airflow to MAX by pushing the power button a second time.
	Battery might be low.	Place on charge.
	The solution cup is too low.	Add more solution to the cup.
System will not turn on	The system has a flat battery.	Place on charge.
System will not charge	Charging cord not attached correctly.	Remove, then re-fit charger.
	Charger port is not pushed into the wall socket.	Push charger plug firmly into the socket.
	Electricity is not turned on.	Ensure power point is turned on.
System is leaking	The solution cup is not screwed in correctly.	Unscrew and re-attach the solution cup.
	Residual solution remains in the system.	You may need to depressurise applicator, remove cup and hold Cordless system over the sink and pull trigger to drain residual solution.

TROUBLESHOOTING

PROBLEM	CAUSE	WHAT TO DO
No solution is coming out of Cordless system	Nozzle may be blocked.	Spray warm water through the applicator.
	Solution pick-up tube not fitted correctly.	Remove the tube and re-fit.
	Solution cup is filled to low.	Add more solution to the cup.
	The solution dial is set too low.	Increase setting on the solution dial. Number 1 is the lowest, and number 5 is the highest.
	Trigger is not being pulled.	Pull the trigger to release the solution.
	Trigger is jamming.	Spray warm water through the system while the solution dial is set to "C" and pull the trigger repetitively until it releases.
Solution is beading on skin	Too much tanning solution has been sprayed on the skin.	Dab area with a clean, dry towel and re-spray lightly over the area to blend tan.
	Dial is set to high and releasing too much solution.	Reduce setting on the dial.
	The spray application is too slow.	Speed up the application, or reduce the setting on the dial. 1 is the lowest, and 5 is the highest setting.

TROUBLESHOOTING

PROBLEM	CAUSE	WHAT TO DO
Solution is beading on skin	The client has not prepared their skin correctly i.e moisturiser or oil based product residue may remain on the skin.	Dab area with a clean, dry towel and re-spray lightly over the area to blend tan. Client may even have to remove product residue from the skin before proceeding with the tan application.
	The client may be excessively hot and perspiring.	Dab area with a clean, dry towel and re-spray lightly over the area to blend tan.
The client has tanning solution in areas they do not wish to tan	The technician has sprayed the area incorrectly.	Using a damp cloth, wipe the area immediately, or once developed, exfoliate the area using a tan remover product.
	The client has touched a part of their body with a spray-tanned area.	Using a damp cloth, wipe the area immediately, or once developed, exfoliate the area using a tan remover product.
The client appears to be orange	Too much tanning solution has been sprayed onto the skin.	Exfoliate the skin using a tan remover product.
	The client may not have followed rinse instructions for rapid tan.	Exfoliate the skin using a tan remover product.
	The client may have a low tolerance to DHA.	Exfoliate the skin using a tan remover product.

TROUBLESHOOTING

PROBLEM	CAUSE	WHAT TO DO
The spray has not developed as dark as desired	The spray tan solution used may be old or heat affected, reducing the desired reaction on the skin. Sometimes a green hue will appear to indicate a product has degraded.	Keep the solution in a cool, dry place and ensure the solution hasn't expired.
	A different solution was sprayed, or the spray application dial was set lighter.	The client can be re-sprayed if required after their minimum 8 hours and after taking a shower.
	The client may have showered or perspired before the tan could develop.	The client can be re-sprayed if required after their minimum 8 hours and after taking a shower.
	Client may have showered too early.	The client can be re-sprayed if required after their minimum 8 hours and after taking a shower.
	Other factors may affect the tan's development, including diet, hormones and medication.	Please refer to the client.
	The client may have used soap or body wash, preventing DHA from developing on the skin.	Ensure the client has followed the correct preparation and post-spray tan care recommendations. The client can be re-sprayed if required after their minimum 8 hours and after taking a shower.

SAFETY, WARNINGS & CAUTIONS

The Tanning Essentials Cordless Spray Tanning System is designed and built to the highest standards.

- Do NOT expose the system to excessive heat.
- Do NOT place near naked flame sources or alike.
- Do NOT make unapproved alterations to this product.
- Do NOT expose the system to excessive heat.
- Do NOT use if it has a damaged power cord or plug.
- Keep out of reach from children.
- Keep away from water.
- Avoid direct sunlight and store indoors in a cool, dry place below 50°C.
- Unplug this apparatus during electrical storms or when unused for long periods.
- If the battery leaks, avoid contact with the skin and eyes. If contact is made, seek medical advice.
- Only use attachments/accessories specified by the manufacturer.
- Use this product only with an approved power supply per the manufacturer's specifications.
- Please dispose of used batteries properly, following local regulations.
Do not incinerate. This product should be delivered to an appropriate collection facility for recycling and not disposed of in the general waste. Removal of the rechargeable lithium-ion battery in this product should be conducted only by a qualified professional.

The Tanning Essentials Cordless system has a one year warranty from the date of purchase.

WARRANTY INFORMATION

IMPORTANT

Please keep your proof of Purchase and User Manual in a safe place as you will require these to make a warranty claim. Prior to making a claim you should read through the trouble shooting section in the manual and contact your supplier. All warranty claims should be made directly to your supplier.

If within one (1) year from the date of purchase, the product fails due to a defect in material or workmanship, we will repair if possible or replace it free of charge with a comparable unit which may be new or refurbished. This warranty applies only to the original purchaser and is not transferable. The goods must be returned to the seller with proof of purchase to be assessed at the purchasers cost.

Warranties shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. The manufacturer shall not be obligated under these warranties:

- a) to repair damage resulting from attempts by personnel other than authorised representatives to install, repair or service the product;
- b) to repair damage, malfunction, or degradation of performance resulting from improper use or incompatible solution;
- c) to perform maintenance or cleaning or to repair damage, malfunction, or degradation of performance resulting from failure to perform user maintenance and cleaning as prescribed;
- d) to repair damage, malfunction, or degradation of performance resulting from use of the product in an environment not meeting the operating specifications,

To activate your warranty, please complete the information and post to Tanning Essentials within 14 days of purchase.

WARRANTY RETURN FORM

Please include this form when returning warranty items.

Customer Information:

DATE:

CUSTOMER NAME:

BUSINESS NAME:

CONTACT NUMBER:

E MAIL:

ADDRESS :

(PO Box Not Accepted)

I give my authority for goods to be left at the postal address mentioned above: Please circle YES / NO
Please Note: If circled Yes, no liability will be taken

Product Information:

PRODUCT NAME:

PURCHASE DATE:

SUPPLIER INVOICE No*:

* All warranty claims must include proof of purchase. This must be a photocopy of the original invoice.

Reason for Return:

SAFETY INFORMATION

The Tanning Essentials Cordless Spray Tan System is designed and built to the highest standards. This system must be used with professional spray tan solution, kept away from water, be connected to the correct power supply at all times and must not be operated by children.

Please note the details of your model here:

MODEL NAME:

SERIAL NUMBER:

DATE OF PURCHASE:

SUPPLIER NAME:



The Tanning Essentials Cordless Spray Tan System is made in China



WARRANTY CARD

MODEL TYPE:

SERIAL NUMBER:

SUPPLIER NAME:

DATE OF PURCHASE:

NAME:

ADDRESS:

SUBURB:

POST CODE:

STATE:

COUNTRY:

EMAIL:

PHONE:

BUSINESS TYPE

BEAUTY

TANNING

HAIR

MOBILE

HOME

To submit your warranty online, please visit www.tanningessentials.co and select the warranty link. Please include proof of purchase.

OUR DETAILS

ADDRESS:

15 Production Drive, Campbellfield, VIC. 3061 Australia

PHONE:

1300 877 677 (within Australia)

INTERNATIONAL PHONE:

+613 9463 8900

EMAIL:

sales@tanningessentials.co

WEB:

www.tanningessentials.co



www.facebook.com/tanningessentials



www.youtube.com/user/TanningEssentials

AUSTRALIA | CHINA | UNITED KINGDOM | USA

www.tanningessentials.co



AFFIX
POSTAGE
STAMP
HERE

Tanning Essentials

15 Production Drive
Campbellfield, VIC. 3061
Australia